

# HEINNER

## CERAMIC FAN HEATER

Model: HCH-L1400BK



*This product is only suitable for well insulated spaces or occasional use*

- Ceramic fan heater
- Power: 700W/1400W
- 2 heating settings

Thank you for choosing this product!

## I. INTRODUCTION

***Please read this instruction manual carefully before using it and keep it for later information***

This manual is conceived for offering you all of the necessary info regarding installation, using and maintenance of the machine. For a correctly and safely use of the machine, please, read this manual before installation and using.

## II. PACKAGE CONTENTS



- **Ceramic fan heater**
- **Instruction Manual**
- **Warranty card**

### III. SAFETY MEASURES

Thank you for buying this ceramic fan heater. Please read these instructions carefully and keep them in a safe place for future reference.


When switched on for the first time a slight odor might be emitted for a few minutes. This is harmless and occurs with most heaters when any slight traces of dust or lubricants that may have collected in the factory are heated away.

#### **PRECAUTIONS:**

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- CAUTION - Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- WARNING: In order to avoid overheating, do not cover the heater.
- The heater must not be located immediately below a socket-outlet.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

## IV. USING THE APPLIANCE

### SYMBOL FUNCTION

“O”	OFF
“  ”	Fan only, no heat
“I”	Low heat output
“II”	Full heat output

 
### THERMOSTAT

Turn clockwise to increase the heat output.

### OPERATION

- Plug the heater into a suitable power outlet [observing all the instruction regarding positioning and switch on.

#### To use the fan only function:

- Turn the control dial to “”. The fan will blow out air at room temperature.
- If the fan does not operate, the ambient room temperature is cooler than the built-in thermostat “OFF” level. Turn the thermostat dial gradually clockwise and the fan will start blowing.
- As soon as the fan starts, the light in the front of the machine will illuminate.

#### To use the machine for heating:

- Turn the control dial to “I” for low heat and “II” for full heat.
- Set the level of heat by turning the thermostat dial gradually clockwise for the lowest heat and fully clockwise for maximum.
- The thermostat will turn the machine off when the selected room heating is achieved, and when the temperature drops it will turn on again automatically.
- For maximum heat output use “II” with the thermostat turned fully clockwise.

### OVERHEATING

- The thermostat will turn the machine off it overheats.
- Overheating can be caused by obstruction to the air intakes on the back of the machine or the grill on the front .If this occurs please disconnect the machine and allow it to cool for 30 minutes. Remove any obstruction and turn the machine back on.

### SAFETY TIP-OVER SWITCH:

- The appliance is fitted with a tip-over switch. When you use the appliance in an upright position on a flat and stable surface, the tip-over switch will be on. In the event the heater is knocked over, the heater will stop functioning automatically.

## V. CLEANING AND MAINTENANCE

- There are no parts inside the machine that require your attention or servicing. Do not try to open the outer case. By doing so you could damage the motor and heating element and invalidate the warranty. If you have a problem with the heater, or if the power cord gets damaged in any way, you MUST take the unit to a suitably qualified engineer or electrical repair centre.
- Before cleaning the machine, please make sure it is disconnected from the power supply and has cooled down completely.
- Never cleaning the machine, please make sure it is disconnected from the power supply and has cooled down completely.
- Never clean the machine with water and do not let it get wet under any circumstance.
- The outside case and be cleaned using a slightly damp lint-free cloth [a small amount of detergent can be used if required].
- To remove any dust particles etc. form inside the front grill, or the rear air intakes, you can use a regular vacuum cleaner.
- Always make sure the machine is completely dry before using.
- If you are not going to use the heater for a while it is best to make sure it is clean and dry and then store it inside a plastic bag in a cool dry place.
- With sensible care and attention this heater will give you many years of good service and economical heating.

## VI. TECHNICAL FICHE

Table	Model identifier for electric local space heaters		
Model number:	HCH-L1400BK		
Item	Symbol	Value	Unit
<b>Heat output</b>			
Nominal heat out-put	$P_{nom}$	1.400	kW
Minimum heat out put (indicative)	$P_{min}$	0.0053	kW
Maximum continuous heat output	$P_{max,c}$	1.400	kW
<b>Auxiliary electricity consumption</b>			
At nominal heatoutput	$e_{l_{max}}$	N/A	kW
At minimum heatoutput	$e_{l_{min}}$	N/A	kW
In standby mode	$e_{l_{SB}}$	N/A	kW
<b>Type of heat input, for electric storage local space heaters only (single select)</b>			
manual heat charge control, with integrated thermostat			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
manual heat charge control with room and/or outdoor temperature feedback			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
electronic heat charge control with room and/or outdoor temperature feedback			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
fan assisted heat output			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
<b>Type of heat output/room temperature control (single select)</b>			
single stage heat output and no room temperature control			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
Two or more manual stages, no room temperature control			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
with mechanic thermostat room temperature control			<input checked="" type="checkbox"/> Yes <input type="checkbox"/> No
with electronic room temperature control			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
electronic room temperature control plus day timer			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
electronic room temperature control plus week timer			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
<b>Other control options (multiple selections possible)</b>			
room temperature control, with presence detection			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
room temperature control, with open window detection			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
with distance control option			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
with adaptive start control			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
with working time limitation			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
with black bulb sensor			<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No
Contact details	Network One Distribution Marcel Iancu Street, no 3-5, Bucharest, Romania Tel: +40 21 211 18 56, <a href="http://www.heinner.com">www.heinner.com</a> , <a href="http://www.nod.ro">www.nod.ro</a>		



**Environment friendly disposal**

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipment's to an appropriate waste disposal center.



**HEINNER** is a registered trademark of **Network One Distribution SRL**. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from NETWORK ONE DISTRIBUTION.

Copyright © 2013 Network One Distribution. All rights reserved.

[www.heinner.com](http://www.heinner.com), <http://www.nod.ro>

<http://www.heinner.com>, <http://www.nod.ro>



This product is in conformity with norms and standards of European Community

Importer: **Network One Distribution**

Marcel Iancu Street, no 3-5, Bucharest, Romania

Tel: +40 21 211 18 56, [www.heinner.com](http://www.heinner.com), [www.nod.ro](http://www.nod.ro)