

HEINNER

CONVECTOR HEATER

Model: HCVH-Y2000TBK



This product is only suitable for well insulated spaces or occasional use

- Convector heater
- Power: 1800-2000W
- 2 heating settings

Thank you for choosing this product!

I. INTRODUCTION

Please read this instruction manual carefully before using it and keep it for later information

This manual is conceived for offering you all of the necessary info regarding installation, using and maintenance of the machine. For a correctly and safely use of the machine, please, read this manual before installation and using.

II. PACKAGE CONTENTS



- **Convector heater**
- **Instruction Manual**
- **Warranty card**

III. SAFETY MEASURES

- Before any use, refer to the corresponding section in this user manual.
- In accordance with European directives applicable to this product.
- Warning: In order to avoid overheating, do not cover.

GENERAL SAFETY INFORMATION


1. This device may not be operated:

- Are in rooms that fire or explosion risk from chemicals, dust, gases or vapors;
- Lead or in the immediate vicinity of pipes or containers, flammable or explosive substances.

2. Place the heater on a firm, level ground.

3. Do not insert objects through the ventilation slots of the device.

4. The heater is not designed for use in bathrooms, washrooms or other damp areas. Set the heater on so that the unit in water tank (bath, ...) or the like may fall.

5.  **WARNING:** The free air outlet must not be affected. Therefore, the upper and grilles of the unit may not quite yet be partially covered for safety reasons.

6. After use, turn the power zurerst, then unplug the power cord..

7. Make sure that the power cord does not touch the radiator. Place the unit directly under a wall outlet.

8. Check before you use the appliance if the mains voltage with which you want to operate the device matches the specified on the nameplate of the device voltage!

9. The convector is used solely for heating or tempering of rooms. The device is intended for normal household use and similar purposes.

10. Never operate the appliance unattended.

11. The noise after turning on / off of the unit is normal.

12. The device may only be opened and repaired by a specialist.

13. If the supply cord is damaged, contact the device to come into operation. Let's replace the cable by qualified personnel.

 
14. Never pull on the cord to move the device! Make sure that does not happen to be the connecting cable gets stuck somewhere and doing this for the case of the device could!

15. Keep a safe distance from 1 m around the device.

WARNING:


- The machine must not be covered, since it can be overheated or otherwise fire hazard.
- Children or persons who lack knowledge or experience with the device, or who are restricted in their physical, sensory or mental disabilities may not use the device without supervision or instruction by a person responsible for their safety.
- The unit should be kept away from children.
- If the supply cord is damaged it must be replaced by the manufacturer or its service agent or a qualified person in order to avoid a hazard.

IV. PRODUCT DESCRIPTION

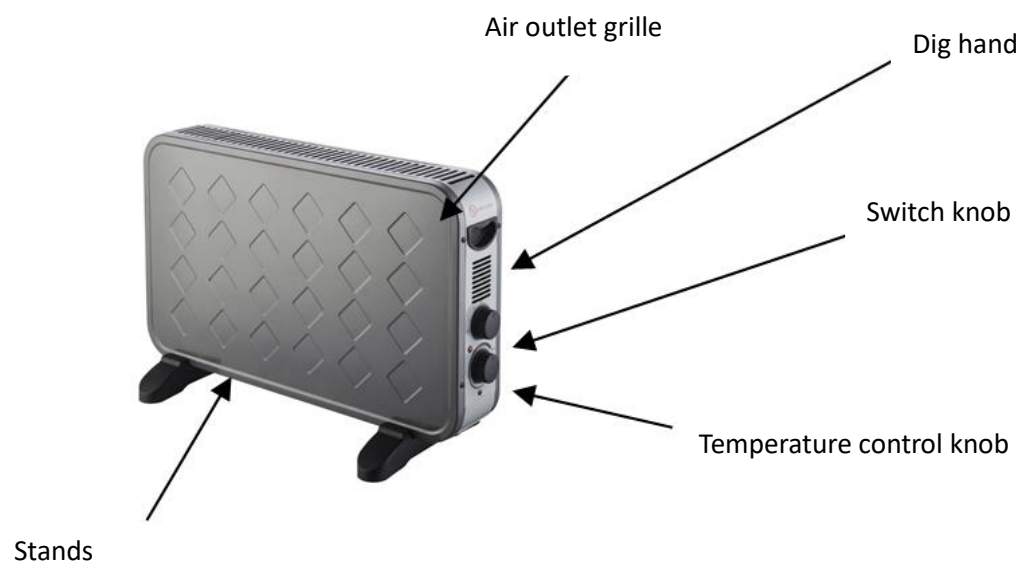


After unpacking:

 - Inspect the device for visible damage. Do not forget to unpack the two feet. Mount them at the bottom of the unit.
 - Connect the power cord directly into a grounded outlet.
 - Connect the unit to a properly installed power outlet (220V).
 - After use, remove the plug from the socket.
1. Before using the heater as a standalone unit, you must mount the feet.

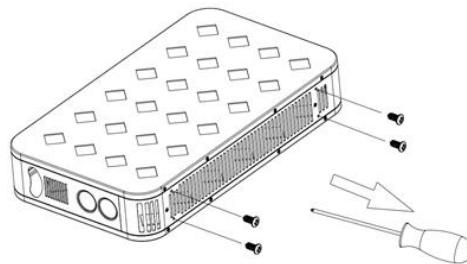

 2. As shown in the figure Please screw these four screws out first.
3. Attach the feet to the bottom with the four supplied self-tapping screws. Make sure that the screws are installed in the correct position on the lateral parts.

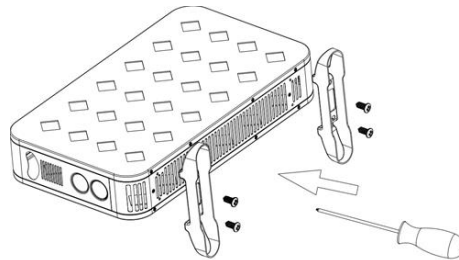

USING OF THE APPLIANCE

- a. Turn the temperature knob to the right, the heater is turned on. Set the thermostat to the highest temperature MAX.
- b. Once reached the desired temperature, turn the thermostat counterclockwise along until it reaches the thermostat the unit turns off by an audible "click".
- c. The set room temperature is thus maintained by the convector almost.

KNOB POSITION

- a. Turn the knob to desired heating level according to the table below:

First setting	1250W
Second setting	2000W

- b. The thermostat switches the convector on automatically and off. If the set temperature falls below the convector begins to heat up until the temperature is reached again.
- c. The thermostat turns off the heater when the activated room temperature is reached. The indicator does not light.

The blower (model dependent):

In order to better circulate the air in the room, you can turn the fan on the fan switch. The fan indicator lights. The heated air is also blown through the air outlet grille.

V. CLEANING AND MAINTENANCE

- Disconnect the device from the mains before cleaning!
- Wait, if necessary, until it has cooled to normal temperature.
- Clean the vents with a soft brush.
- The rest of the case is to be wiped off with a soft, dry cloth.
- If heavily soiled, use a slightly damp cloth.
- Do not use abrasive cleaners or solution center!!
- For longer periods store the device protected from dirt and dust, and in a dry place at.

VI. TECHNICAL FICHE

Model	HCVH-Y2000TBK
Voltage	220-240 V~
Frequency	50/60Hz
Rated power	1800-2000W

Model identifier(s): HCVH-Y2000TBK					
Item	Symbol	Value	Unit	Item	Unit
Heat output			Type of heat input, for electric storage local space heaters only (select one)		
Nominal heat output	P _{nom}	2.0	kW	manual heat charge control, with integrated thermostat	NA
Minimum heat output (indicative)	P _{min}	1.2	kW	manual heat charge control with room and/or outdoor temperature feedback	NA
Maximum continuous heat output	P _{max, c}	1.9	kW	electronic heat charge control with room and/ or outdoor temperature feedback	NA
Auxiliary electricity consumption				fan assisted heat output	NA
At nominal heat output	e _{lmax}	NA	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	NA	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	NA	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	Yes
				with electronic room temperature control	No
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	No
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No

				room temperature control, with open window detection	No
				with distance control option	No
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact details	<p>Network One Distribution</p> <p>Str. Marcel Iancu, Nr. 3-5, București, 020757</p> <p>Tel: +40 21 211 18 56, www.heinner.com , www.nod.ro</p>				



Environment friendly disposal

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipment's to an appropriate waste disposal center.



HEINNER is a registered trademark of **Network One Distribution SRL**. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from NETWORK ONE DISTRIBUTION.

Copyright © 2013 Network One Distribution. All rights reserved.

www.heinner.com, <http://www.nod.ro>

<http://www.heinner.com>, <http://www.nod.ro>



This product is in conformity with norms and standards of European Community

Importer: **Network One Distribution**

Marcel Iancu Street, no 3-5, Bucharest, Romania

Tel: +40 21 211 18 56, www.heinner.com , www.nod.ro